

- ( <b>H) HONDA</b> - INSTALLATION	Accessory CROSSBARS (EX)	Application 2008 PILOT	Publications No. All 37155
INSTRUCTIONS	P/N 08L04-S9V-100A	200011201	Issue Date JUNE 2007
PARTS LIST		INSTALLATION	
Front cross bar (long)		<b>Customer Information:</b> The installation instruction is inten skilled technicians who have the equipment, and training to contequipment to your vehicle. The should not be attempted by "d	ded for use only by the proper tools, rrectly and safely add ese procedures
Rear cross bar (short)		NOTE:	
		• Wipe the roof rails before installing the crossbars.	
		<ul> <li>Be extremely careful not to</li> <li>Insert a small flat-tip screw the inside of the roof rail ba retaining tab, then remove</li> </ul>	vdriver into the hole on ase and release the
4 Holders		RETAINING TAB FRONT COVER	ROOF RAIL
4 Torx bolts		SMALL FLAT-TIP SCREWDRIVER	
4 Lock washers		ROOF RAIL BASE	$\mathbf{i}$
4 Washers		<ol> <li>Remove the roof rail base nuts and one bolt).</li> </ol>	from the roof (two Torx
<b>TOOLS REQUIRED</b> Small flat-tip screwdriver T-30 Torx bit T-15 Torx bit		T-30 TORX NUTS	

T-15 TORX BOLT

ROOF RAIL BASE (Remove.) 3. Insert the two holders in the groove of the roof rail.

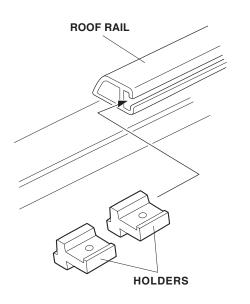

- 4. Repeat steps 1 through 3 on the other roof rail.
- 5. Slide each holder back, and align the hole in the holder with mark on the inside of the roof rail.

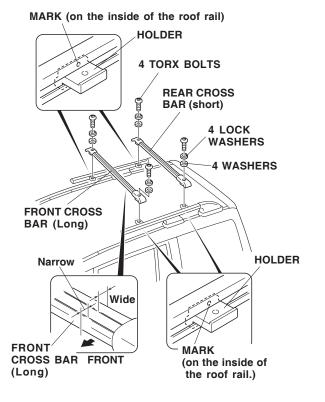

- Position the cross bars on the holders, and install the Torx bolts with lock washers and washers. Torque the bolts to 10 N⋅m (7 lb-ft).
- 7. Reinstall the roof rail bases and the front covers.

## **USE AND CARE**

- Check the roof rack cross bar mounting bolts frequently, and retighten them if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 165 lbs (75 kg).

