



INSTALLATION INSTRUCTIONS


 
 

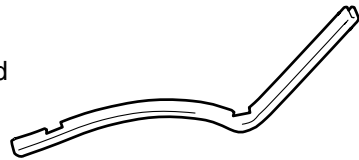
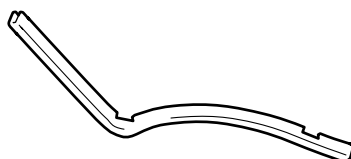
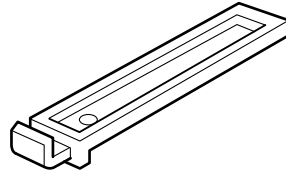
Accessory
DOOR EDGE GUARDS

Application
2014 PILOT

Publications No.
All 50249

Issue Date
AUG 2013


PARTS LIST

- Right front upper door edge guard 
- Left front upper door edge guard 
- Right front lower door edge guard 
- Left front lower door edge guard 
- Right rear door edge guard 
- Left rear door edge guard 
- Seam sealant cutting tool 

TOOL AND SUPPLIES REQUIRED

- Rubber mallet
- Felt-tip pen
- Touch-up paint
- Scale

Illustration of the Door Edge Guards on the Vehicle

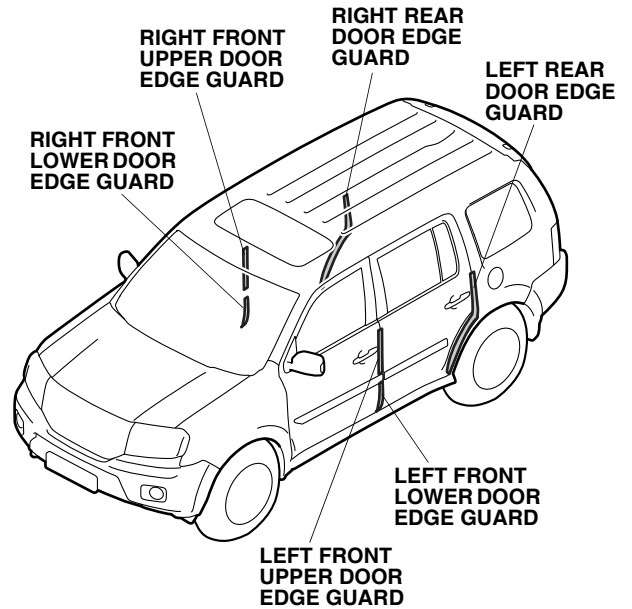

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- These instructions show the right door edge guards being installed. The same procedure applies to installing the left door edge guards.
- Wax the areas to be covered with a high-quality paste wax.


Installing the Front Door Edge Guards

1. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.

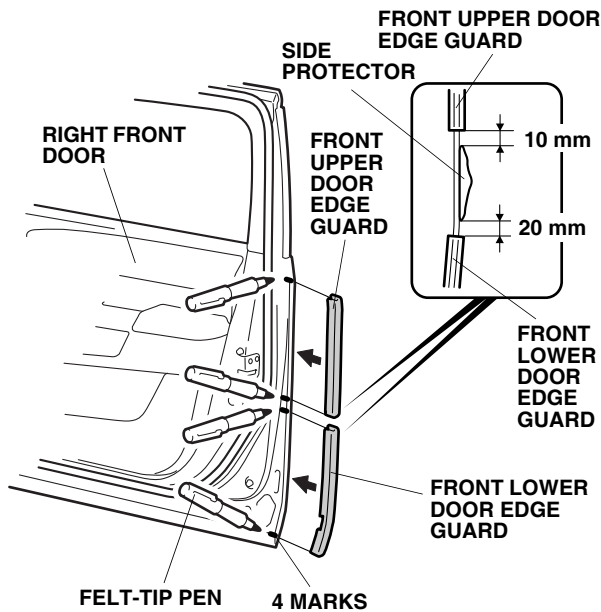


2. Position the right front upper door edge guard and right front lower door edge guard on the right front door at the measurements shown.
3. Mark the sealant at the top and bottom of each edge guard.
4. Remove the door edge guards.


5. Position the cutting edge of the seam sealant cutting tool against the door edge and trim the seam sealant from mark to mark. The cutting tool cuts in only one direction. Move it upward on the right side of the vehicle and downward on the left side of the vehicle.

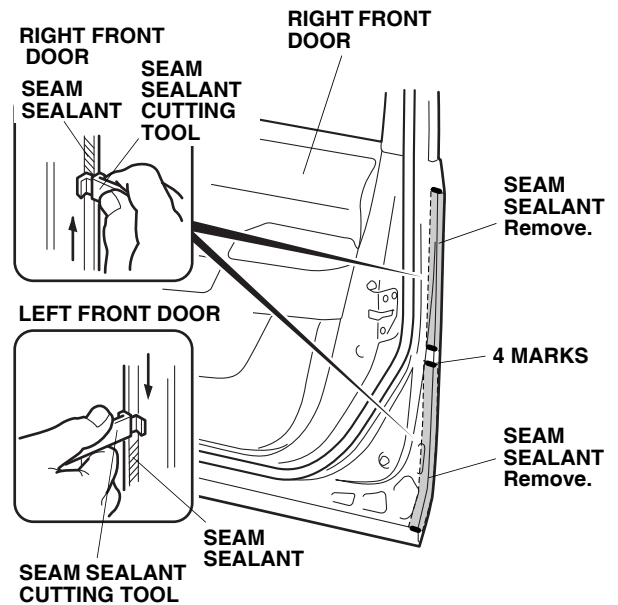

6. Apply touch-up paint to the cut seam sealant area and let it dry.
7. Position the right front door edge guards on the right front door edge, aligning them to the marks made in step 3.

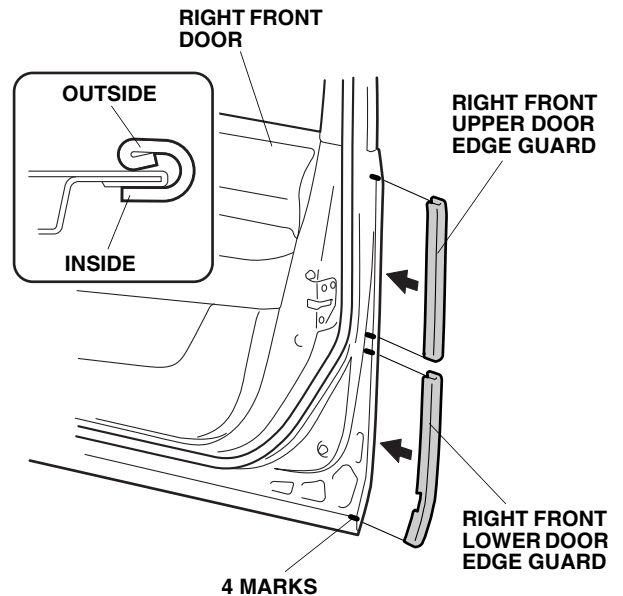


- Make sure they are positioned correctly, then tap the right front door edge guards into position with a series of light taps with a rubber mallet. Once in place, do not remove, reposition, or reinstall the right front door edge guards or they will not hold securely.

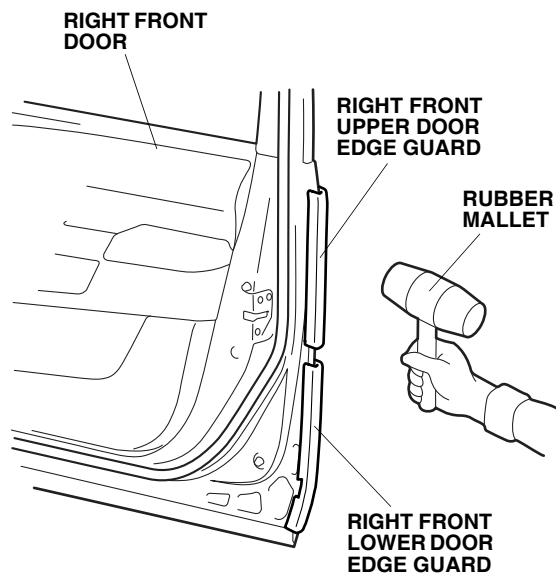

- Repeat steps 2 through 8 to install the left front door edge guards.

Installing the Rear Door Edge Guards


- Position the right rear door edge guard, aligning it with the contour of the right rear door. Mark the sealant at the top and bottom of the edge guard.

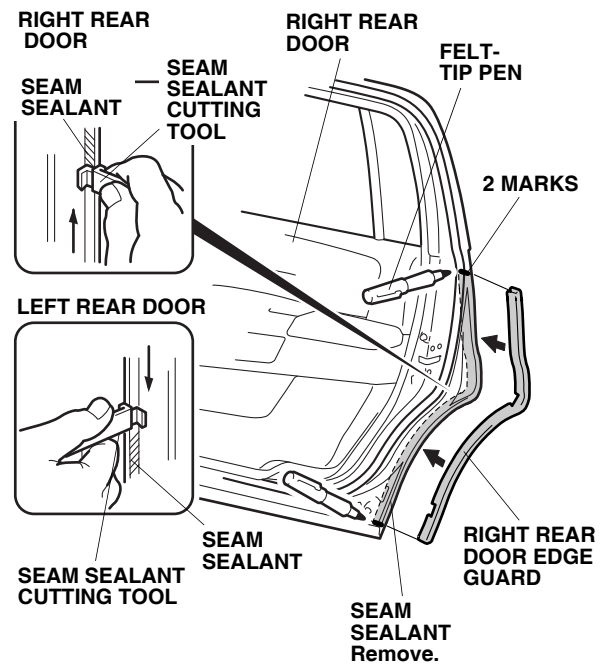


- Remove the door edge guard.
- Position the cutting edge of the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark. The cutting tool cuts in only one direction. Move it upward on the right side of the vehicle and downward on the left side of the vehicle.
- Apply touch-up paint to the cut seam sealant area and let it dry.

14. Position the right rear door edge guard on the right rear door edge on the vehicle and align it to the marks made in step 10.

NOTE: Install the door edge guard over the protective film.

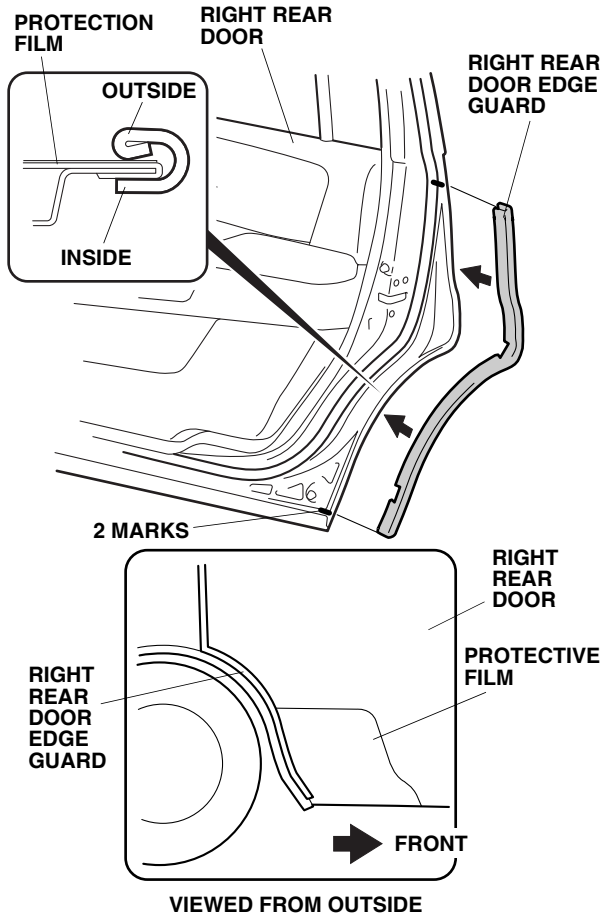

15. Make sure it is positioned correctly, then tap the right rear door edge guard into position with a series of light taps using a rubber mallet. Once in place, do not remove, reposition, or reinstall the right rear door edge guard or it will not hold securely.

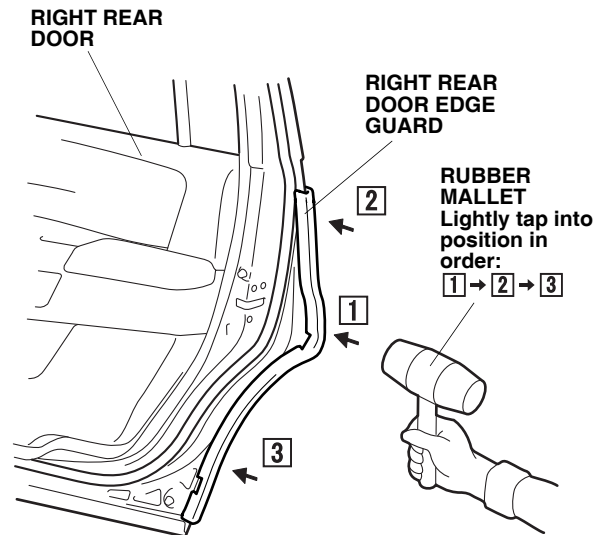

16. Repeat steps 10 through 15 to install the left rear door edge guard.