



HONDA INSTALLATION INSTRUCTIONS

Accessory
HOOD AIR DEFLECTOR
P/N 08P47-SZA-100


Application
2009 PILOT

Publications No.
All 39410-39720

Issue Date
JUNE 2008

PARTS LIST

Hood air deflector




2 Brackets A



2 Brackets B



2 Brackets C

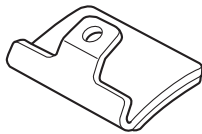

4 Clips



2 Screws



4 Truss screws




4 Grommet nuts



2 Collars




2 Alcohol pads

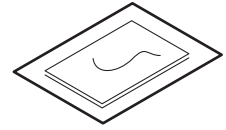


4 Protection films




Template

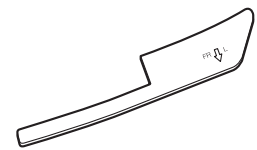

3 Rubber blocks

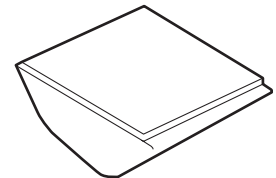

Hood Label




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Felt-tip pen

Masking tape

Illustration of the Hood Air Deflector Installed on the Vehicle

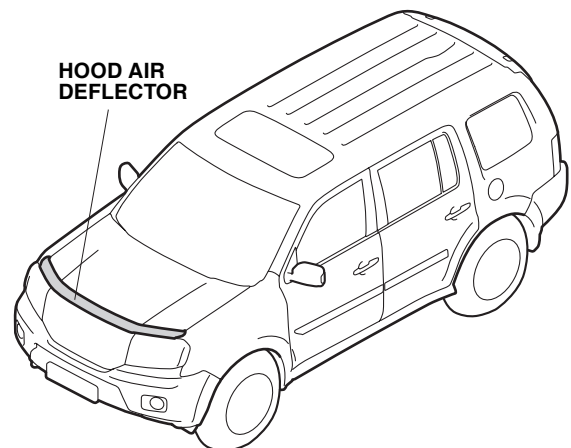

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:



- Do not to damage the body finish when you install the hood air deflector.
- This hood air deflector kit should be installed only when the ambient air temperature is above 15°C (60°F).
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.

Installing the Hood Air Deflector

1. Open the hood. Locate the four square holes on the hood. Push four grommet nuts into each square hole.

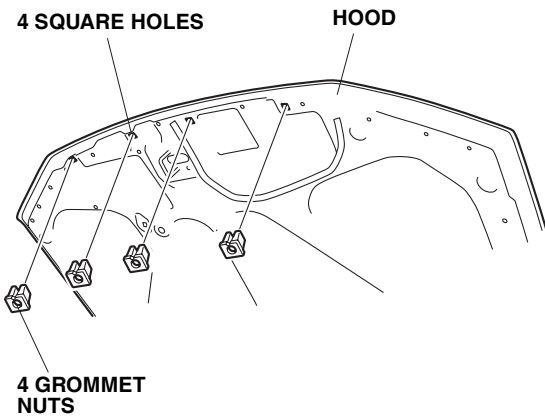


2. Using an alcohol pad, thoroughly clean the areas where the protection films will attach.

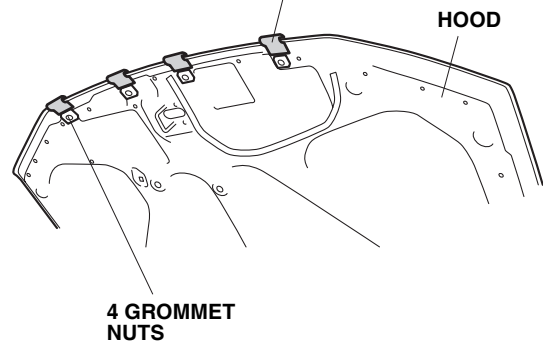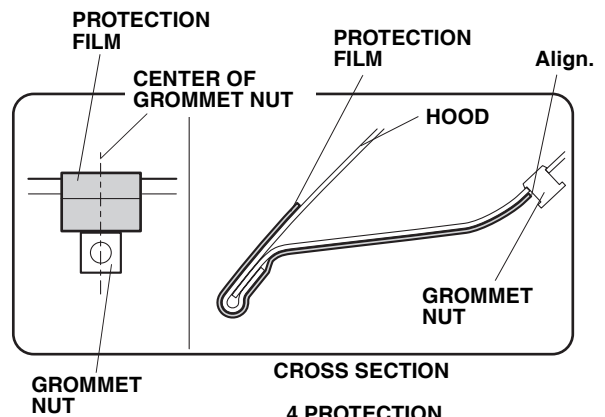


3. Remove the adhesive backings from the protection films and attach four protection films around the front of the hood as shown.

- Position two brackets A and two brackets B over the protection films, and loosely tighten it with four truss screws.

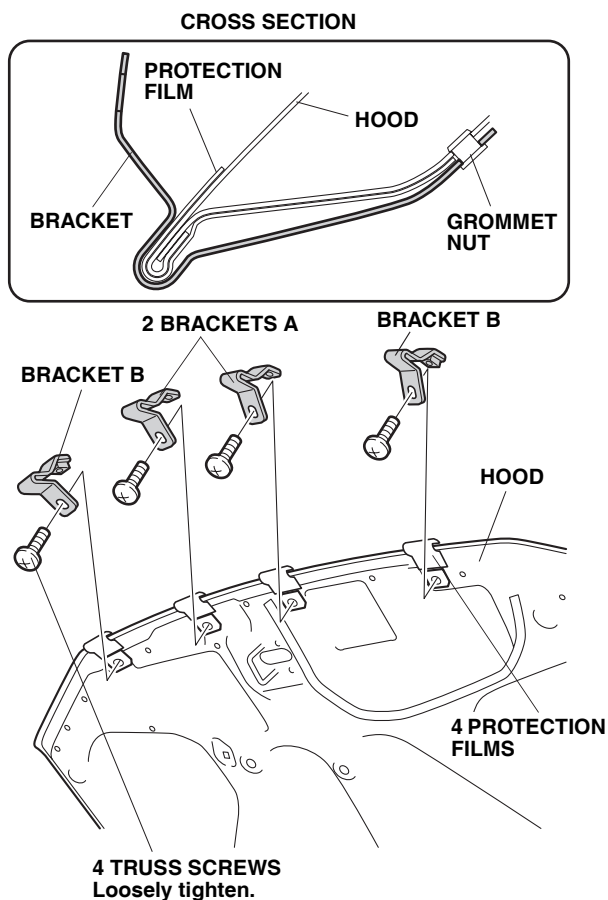


- Using an alcohol pad, thoroughly clean the areas where the rubber block and hood label will attach.

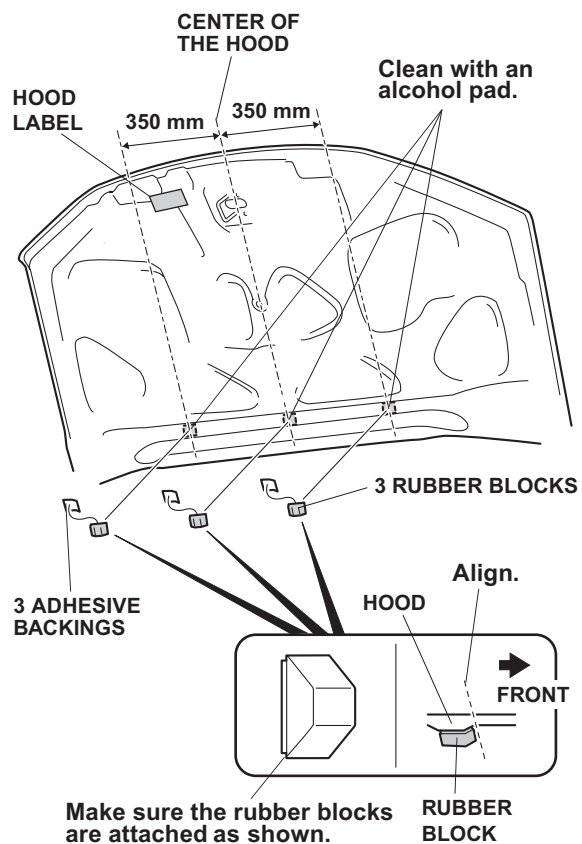


- Remove the adhesive backings from three rubber blocks and hood label and attach them to the hood as shown.

7. Close the hood. Using an alcohol pad, thoroughly clean the area where the bracket C will attach.

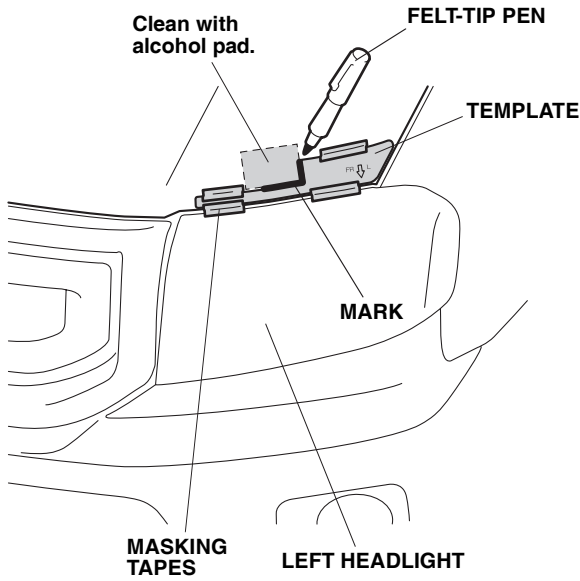


8. Align the template to the hood and tape it with the masking tapes. Using a felt-tip pen, mark on the hood as shown.
9. Remove the template.
10. Remove the adhesive backing from the bracket C and attach it to the mark made in step 8 as shown. Make sure the bracket C is installed in the correct way.

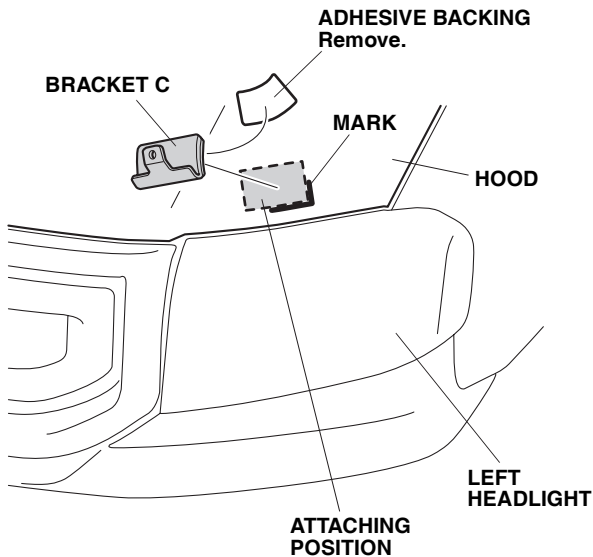


11. Reverse the template and repeat steps 7 through 10 for the bracket C on the right side of the vehicle.


12. Peel back 1-1/2 to 2 inches of adhesive backing from each adhesive tape and tape the ends to the front surface of the hood air deflector.

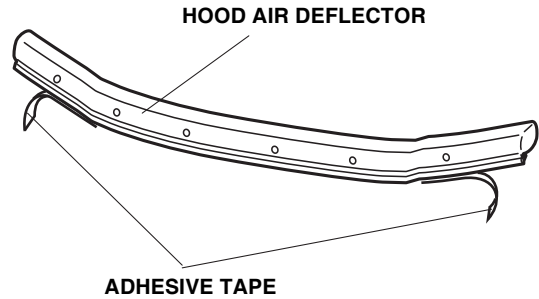

13. Align the holes on the hood air deflector with the brackets A, B, and C. Install the hood air deflector with two screws, two collars, and four clips. Tighten the screws securely. Remove the adhesive backings.

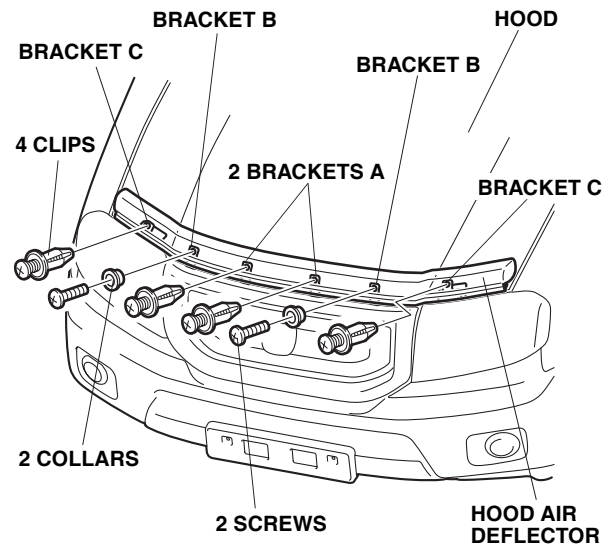

14. Using a large end of the template, insert it between the hood and the hood air deflector to unfold the molding as shown.

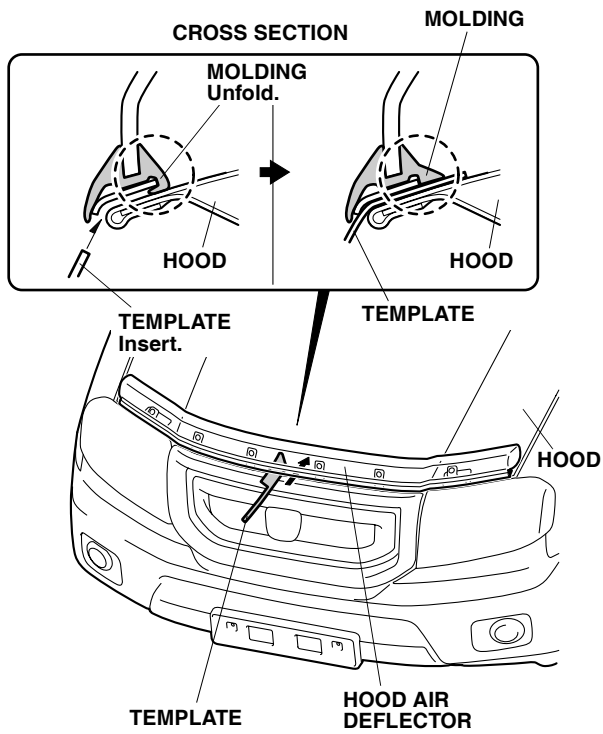

15. Open the hood. Tighten the four truss screws loosely tightened in step 4.