



# INSTALLATION INSTRUCTIONS

Accessory  
**TRUNK TRAY**  
P/N 08U45-T3L-100


Application  
**2014 ACCORD**  
**2-DOOR**

Publications No.  
**All 49951**

Issue Date  
**AUG 2013**

## PART LIST


Trunk tray

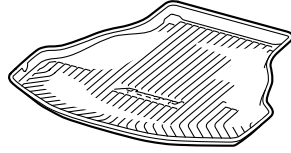

## TOOLS AND SUPPLIES REQUIRED

Utility knife

### *Illustration of the Trunk Tray in the Vehicle*

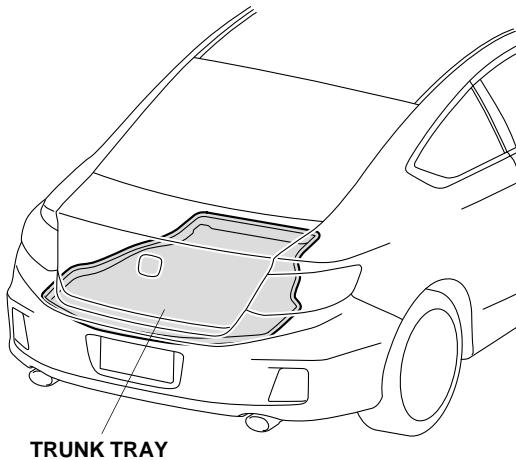

TRUNK TRAY


QB60407AB

## INSTALLATION

If the vehicle is equipped with a cargo net, go to step 2; otherwise, continue with step 1.

### Without Cargo Net


1. Open the trunk lid. Place the trunk tray on the trunk floor.

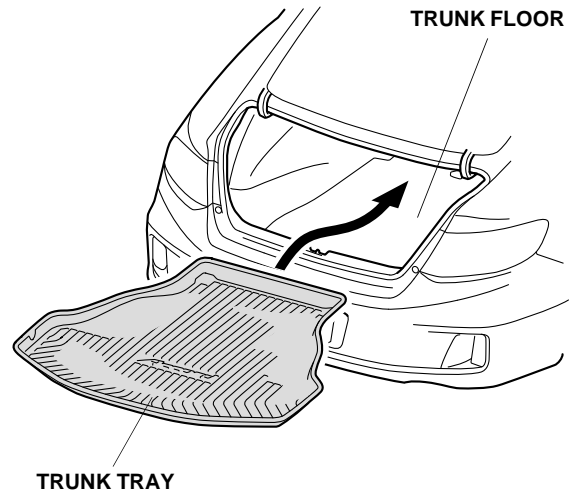

QB60408AB

## With Cargo Net

- Using a utility knife, cut the trunk tray in the areas shown.

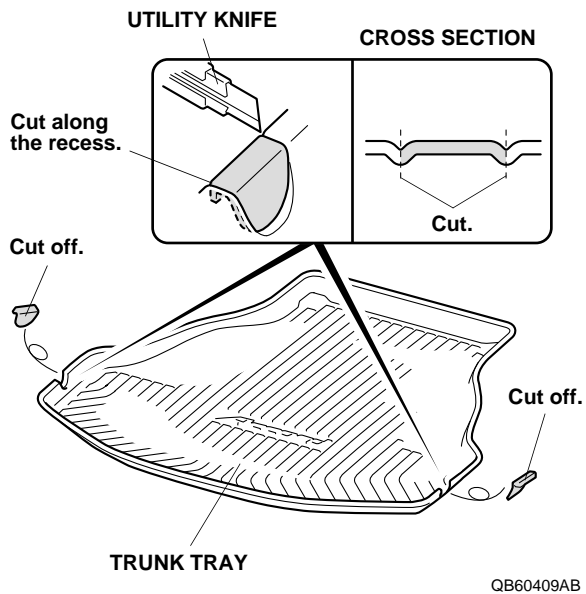

- Open the trunk lid. Place the trunk tray on the trunk floor.

